

Instructions for displaying the desktop & laptop computer on the projector using the Pixie Controller.

- Turn on the Computer (inside, or on top of, the podium) and Login.
(Press and Hold CTRL-ALT-DEL, then enter your Rowan UserName & Password).
Or, if using a laptop, connect it to the input plate on the front of the rack
- Press the ON button to TURN PROJECTOR ON Wait 60 seconds for the projector to warm up.
- After projector warmup, select your desired input by pressing the SOURCE button.
(The HDMI1 input is for the Desktop computer and an HDMI Laptop)
(The COMPUTER input is for a laptop which has a VGA connection)
The SOURCE button toggles between the HDMI1 input (Desktop computer and an HDMI Laptop), and the COMPUTER input (a VGA laptop).
- The MUTE button will blank the display. Pressing it again will display the image once again.



DVD (through the PC)

Play your DVD through the PC by inserting the DVD into the PC's DVD drive. Click on-START, then on COMPUTER. Right-Click on DVD Drive. Click on PLAY WITH VLC MEDIA PLAYER. Look for this icon:




Display Laptop with VGA

Connect VGA & audio cables from laptop to the VGA & Audio connections on the Laptop Connection Plate. To toggle laptop for display on an LCD/Monitor, press **fn + f8** or **fn + f7**. Or, if using Win 7, press & hold the Windows & P keys & click on Duplicate Displays.



Display Laptop with HDMI

Connect HDMI & audio cables from laptop to the HDMI & Audio connections on the Laptop Connection Plate. To toggle laptop for display on the projector, press **fn + f8** or **fn + f7**. Or, if using Win 7, press & hold the Windows & P keys & click on Duplicate Displays. NOTE: You may have to re-route the audio on your laptop from HDMI to Analog for sound to exit the room's speakers.

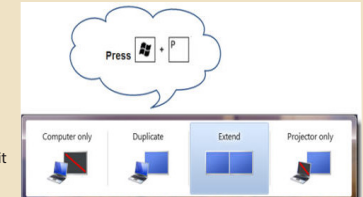


Turn Audio Amp On & Off

Turn on the **large switch** (labeled "AMP" or "SPEAKERS") on the Power Conditioner in the rack to turn speakers on. **When finished, turn the speakers off.**

Adjust Volume

Use the volume DOWN (-) & UP (+) controls on the keyboard, or on the PC or Laptop to adjust the sound level on the PC.

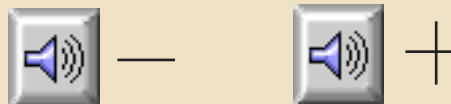

USB/Flash/Jump Drive

Insert a USB/Flash drive into the USB port on the PC front or corner of keyboard. Before removing USB drive, click on **Safely Remove** on the Windows taskbar.

For detailed instructions visit: <http://www.rowan.edu/labs>

Report equipment problems to (856) 256-5552 and leave a voice message including a phone number and classroom location you can be reached or email: classroomsupport@rowan.edu.